## **CONTAINER LOCKING CASTOR KIT**

These kits once fitted to each castor, are then mounted onto each corner of the container, thus making the container mobile.

Fitting requires using two left-hand and two right-hand kits.

Using 3000 Series castors allows a maximum total of 12 tonne loading at 8KPH and EHP castors will allow 20 tonne loading. Please note some castors in each range have lower capacities and this must be allowed for.

Shipping containers have 2 left and right fittings, so to order the correct fittings to move a container, order 2 x 195CONT-LOCKITL, 2 x 195CONT-LOCKITR and 4 x castors.

## KIT CONTENTS

- 1 x Left or right corner fitting
- 1 x Locating bush
- 1 x M30 bolt
- 1 x Flat washer
- 4 x M30 Spring washers & fasteners



To move a container order 2 x 195CONT-LOCKITL, 2 x 195CONT-LOCKITR + 4 castors.



